### **CHAPTER 9**

### THE SHOP INSPECTOR

Preventive maintenance (PM) and the safety inspection of a vehicle go hand in hand. Besides keeping a vehicle in good operating condition, preventive maintenance ensures that a vehicle is safe to operate. The proper inspection of the devices or parts of a vehicle that make for safe operation can be done at scheduled preventive maintenance times.

As a CM-1, you maybe assigned the job of vehicle inspector. Besides making scheduled CESE inspections, you should be looking for inoperative devices that make a vehicle unsafe, and for damage that may have been caused by improper or dangerous operating procedures. You will need to be familiar with instructions and regulations pertaining to safety as well as regular scheduled maintenance inspections. Using the COMCBPAC/COMCBLANTINST 5100 (series), NAVFAC P-300, Management of Transportation Equipment Manual and chapter 19 of the U.S. Army Corps of Engineers, Safety and Health Requirements Manual, 385-1-1, will provide you with guidance in vehicle safety and reliability inspections. Be sure the mechanics working under your supervision are aware of these instructions and the proper procedures of making a thorough vehicle inspection. The job of vehicle inspector should not be assigned to an inexperienced mechanic.

#### WARNING

CUTTING SAFETY SHORT MAY CUT SOMEONE'S LIFE SHORT.

#### THE VEHICLE INSPECTOR

The vehicle inspector is assigned to a maintenance shop in either a public works department, a battalion, or a special operating unit to assist the transportation shops supervisor (public works) or maintenance supervisor (battalion) in inspecting the equipment to be serviced. The inspector should be a senior mechanic, proficient in his rating, and capable of readily determining the nature of necessary repairs. He should be able to exercise independent judgment as to whether the equipment requires immediate attention or can be delayed until the next regular scheduled preventive maintenance inspection. The scheduled preventive maintenance system is designed to ensure optimum life out of the equipment of a unit or station. Figure 9-1 defines the level of inspection and the intervals required for each of

		TYPE "A" PM	TYPE "B" PM	TYPE "C" PM		
	Equipment Type	Minimum Service	Detailed Service & Inspection	Annual Safety Inspection		
	Automotive	Every 40 working days	After every two "A" PMs	As directed by COMCBPAC/		
	Construction	Every 40 working days	After every two "A" PMs	COMCBLANT & COM- FIRSTNCB representatives.		
	Material Handling	Same as for Construction Equipment	Same as for Construction Equipment	(50% of CESE on site per deployment)		
NOTE 1:			ce intervals under normal co reme terrain conditions or as	nditions and should be directed by the maintenance		
NOTE 2:	PM will be perform	med every 90 working days	, and a "B" type PM will be j	serviced as follows: an "A" typ performed after three ycle when the unit is recalled to		

Figure 9-1.-Preventive maintenance interval schedule.

the three categories of equipment. The inspector is responsible for the following:

- 1. Performing the scheduled inspection, completing the appropriate record forms, and noting deficiencies clearly on the Equipment Repair Order or Shop Repair Order
- 2. Checking the file of operator trouble reports before equipment inspection
- 3. Using the latest testing equipment and methods available to the unit or public works department
- 4. Performing minor adjustments incidental to the inspection
- 5. Delivering the initialed Equipment Repair Order or Shop Repair Order to the maintenance supervisor or shops supervisor
- 6. Road testing or field testing the equipment before and following the PM, repair, or overhaul
- 7. Releasing the equipment to full service "ONLY" after final inspection is completed

Inspectors will immediately notify the maintenance supervisor or shops supervisor whenever suspected vehicle abuse or reoccurring mechanical failures occur.

### THE PUBLIC WORKS SHOP INSPECTOR

The three types of inspections performed at an equipment maintenance shop on a public works station are reliability, acceptance, and safety.

The safety inspection is done once a year or every 12,000 miles, whichever occurs first. All deficiencies found should be corrected before the vehicle is returned to service. Automotive safety inspections include the following:

- 1. Brake system. Road test to determine if the brakes are functioning properly. Check brake pedal free travel, Remove the wheels and inspect drums and rotors for wear or cracking. Inspect the pads and lining for excessive wear. Check all brake calipers and wheel cylinders for damage or leaks. Inspect all hydraulic broke lines for leaks, and check the brake fluid level. On air-brake systems, inspect air-brake accessories, air lines, and air tanks for leaks and deterioration. Check air-broke instruments, air control valves, trailer hoses, and glad hands.
- 2. Steering and suspension system. Check all steering devices and linkage for wear or damage. Inspect

all suspension bushings and pivot points. Check all suspension parts for wear or damage.

- 3. Shock absorbers. Check for leakage and proper operation.
- 4. Tires and wheels. Check tires for damage or excessive wear. Front tires of buses, trucks, and truck tractors will be replaced when less than 4/32-inch tread remains. All tires will be replaced when less than 2/32-inch tread remains.
- 5. Fuel system. Check all fuel lines and fuel line connections for signs of leakage. Inspect fuel filter housings for signs of leakage or damage.
- 6. Exhaust system. Check the muffler, exhaust pipe, tailpipe, and all connections for serviceability and leakage.
- 7. Seat belts. Inspect seat belts for wear and for proper mounting.
- 8. Lights. Check all lights, signals, and reflectors. Inspect the condition of the trailer jumper cable. Check the headlights for proper alignment. Lighting requirements are found in the *Federal Motor Carrier Regulations Pocketbook*, U.S. Department of Transportation, Federal Highway Administration, Parts 393.9 through 393.33.
- 9. Instruments, controls, and warning devices. Inspect all instruments, gauges, mirrors, switches, and warning devices for proper functioning and damage.
- 10. Windshield wipers, glass, defrosters. Check wipers, glass, and defrosters for proper operation, wear, damage, or deterioration.
- 11. Fifth wheel and trailer. Inspect trailer kingpin for wear and damage. Check tow bars, tongue sockets, and safety chains.
- 12. Special markings. Inspect all special identification markings, such as NONPOTABLE WATER, FLAMMABLE, U.S. NAVY, and so forth.
- 13. Other items. Check all other components required by the states in which the vehicle is being operated.

For the annual safety inspection on construction and allied equipment, use the correct manufacturer's maintenance and repair manual for guidance.

To avoid unnecessary downtime, coordinate and perform the safety and reliability inspections at the same time. Figure 9-2 is one example of a standard inspection sheet used at some public works stations. The inspection, lubrication, and adjustment functions and

SPECIFICATION FOR SCHEDULED MAINTENAL	NCE	INSI	PEC	rion	IS A	ND S	ERV	<b>ICE</b>	S			
VEHICLE MAKE MODE	EL(S) YEAR(S)											
OPERATION		SI	ERVI	CE	ERVA	L		See				
1000 MILES	6	12	18	24	30	36	42	48	Manual Page			
ENGINE							ļ					
Change engine oil and filter	X	X	X	X	X	X	X	X				
Clean and refill oil bath air cleaner (if so equipped)	X	x	X	X	X	X	X	X				
Replace dry type of air cleaner filter (6 cyl.)		X		X		X		X				
Replace dry type of air cleaner filter (8 cyl.)				X				X				
Test crankcase emission system. Clean system and replace emission control valve if required.	X	X	Х	X	x	x	X	X				
Clean crankcase emission system hoses, tubes, fittings, carburetor spacer and replace if necessary. Replace emission control valve.		x		X		X		X				
Clean crankcase filler breather cap.	X	X	X	X	X	X	X	X				
Replace fuel system filter (gas engine)				X				X				
Inspect thermactor exhaust emission control system hoses and replace if required		X		X		X		X				
Drain, flush, and refill cooling system		]	EAC:	H 24	MO	NTH	<u>s</u>					
Check and lubricate exhaust control valve. Free up if necessary (if so equipped).	X	X	X	X	X	X	X	X				
Clean and adjust distributor points-replace as required (Clean distributor cap)		X		X		X		x				
Check and adjust carburetor-idle speed and fuel mixture		X		X		Х		X				
Check and clean external choke mechanism		X		X		X		X				
Check and adjust ignition timing—initial timing, mechanical and vacuum advances, and vacuum retard (if so equipped).		X		X		X		X				

Figure 9-2.-Example of public works equipment inspection sheet.

frequencies are to be determined by the maintenance and repair manual supplied with the vehicle. When these specifications are not available, they shall be developed under the direction of the transportation director and approved in writing.

### **ACCEPTANCE INSPECTIONS**

Equipment inspectors will inspect all CESE arriving at an activity. Predelivery inspection is similar to that performed by a dealership and is required to ensure safe, serviceable operation. The inspector should pay particular attention to the detection of deficiencies eligible for correction under the warranty program, and for damage caused by the shipper (see chap. 1). Report these problems to the transportation shops supervisor for appropriate action.

# PROPERTY RECORD CARD, DD FORM 1342

The inspector is the primary source for gathering information used to complete the Property Record Card,

DOD PROPERTY	RECORD	XX *	C1-46	14114		2 100	44 64	' ·		P 4 4 (1 4 f	TAG NO.	Form App		
				[,_];;н			126		94-x	XXXX		Budget Be	ire eu No	22-R0
4. COMMODITE CODE			- 14 - 1	ECTION	II IN	YENT								
COMMODITY CODE	202320			901517101 57		300	20	6	FONE 4 10	EODE		COOL		0.6
A HAME OF MANUFACTS	177925	8		3400		4			91		1	MARUFACT		583
				1								. MANOVAL 1		LAIAL
A. M. GENERA		WEIGHT	122.30	TIFICATI	OF NO	623	2.3	A 3 0D	M151A	2	125 5087	AACT HUMBE	<u> </u>	
133" 64"	71"	2400	***			B C #	1							
10. DESCRIPTION AND CO		2400	1 243	9-4-A1	- 31	JU					DIAN	E07-71-	·C-010	3
Truck, Util Tires: 700	X 16 - 6	ply,					M-Se	ries	, W/O	Winc	h			
Engine Seri	1 #50339	52				<u> </u>					H REVERSE	\$10¢ 87	7 63 [	] ×o ·
OUANTITY HORSEPON	cel vo	. 1	PHA: E	CYCLE	,	DC			C <b>5</b>					
HOMSE POW			FOR E		+**	1		LLO			1774 440	FRAME NUM	B ( A	
	-					++			+					
					+	<del>  </del>							<del></del>	
				<del> </del>	-	<del>  -  </del>			+					
B. PRESENT LOCATION				L		1			.4	26.	1. D. PEC C	ONTRUL NO.		
										- 1				
NCBC										29	P035E55	OR CODE	<del></del>	
Port Hueneme	e, CA 930	043									625	83		
	··-		S	ECTION	IL-1N	SPECT	TION F	RECOR	D					
						3 HO	T							YES
O. FOR AT LEAST 12 MY	AND MAINTAINTD	QN 1.74			$\neg$	1	42.	HAVLID	1 5 M BC BC	PAIRED!	1 0 1 LT COV	ta. 3		
1. IF SO, WHEN!	L1. 0 . CHHAJECO	1.416					43.	DO 90 P	# C C # D 5 IN	DICATE :	ATISFACTO	NY PERFORMA	MC L ?	
2. IF SO, EXPLAN UNDER	TIED PROM CHICAN	AL CUISTS	60#A110%*				44.	DRUFAT	NEALLY 05	5 4 - 8 E U				
3. WAS ITEM INSPECTED	UNJER PONER' !	F NOT 146										RING AND REA		$\square$
4. ARE MAINTENANCE CO	STS NORMA, " IF	40f, E++.					46.	## 0 + CR	CY IF NO	DE 5 C # 10			ATING	
S. ARE SAFETY DEVICES					_		47.	PAOPER	LY' IF HO.	DESCRI		MARAS &CLO	<u> </u>	
6. ARE INSTAULATION IN				۸,			48.	B1 CUR.	47 HOJAS		w USCO			
7. ARE OPERATING INSTA	UCTIONS AVAILAG	LE FOR TO	*******				49.	-	20 ARGYE		AST USE OF	EQUIPMENT		·
8. WAS ITEM LAST USED	04 A FINISHING 0	#E #A 7 : 0%	•				50.	HANDLIN	1E0 COST	FOR PACE	ING. CRATIS	16.		
9. WILL ADJUSTMENTS O				••			51.	AVA LAS	E DATE IT	3157818	7104.			
O. IS ITEM SEVERABLE W		47 (-91	.   3			_ _			0 * C 0 > C.				N-1	
1. IS ITEM IN OPERABLE	CONDITION*						53.	OPC HAT	ING TEST C	07£.				
				SEC	TION	111 - R	EMAR	K S						
TC 1 SC 0 ECC 030701 ND 11		•	SA	MP	L	E								_
<del> </del>				CTION	יח. עו	SPOSI	TION			NUED 04	REVERSE	\$10E	YES _	
S. CONSIGNEE INAME AN	O ADDRESS, INC	LUDING Z		CITON	,,				0517104		564. C	ATE OF 013P	0517104	440
									or:		· ·	AOCEEOS IF	30.0	
······································							341		^^	HOONME	**			
			SE	CTION	V . V A	LIDAT	ION	RECOR	10					
7. VALIDATION LTYPED	AME(4) AND 4:4													

Figure 9-3.-DoD Property Record Card, DD Form 1342 (front).

DD Form 1342 (fig. 9-3 and fig. 9-4). This form is used to report acquisitions and transfers of Navy equipment in support of the Navy equipment registration system. It is also used to assist the mechanics, shop supervisor, and technical librarian with information needed in the research of repair parts. Property Record Cards are updated each time a serialized component is changed on the unit (engine, transmission, etc.). The need for

accurate preparation of this form cannot be overemphasized as this document is the sole source for recording all pertinent data relative to the equipment at the Civil Engineer Support Office, Port Hueneme, California.

Since he is the one performing the final inspection, the inspector is responsible for accuracy in obtaining correct information.

			Continuation	of Bloc	k 26 Data	
١.	3600 lb. rated	CVW Cap.		10.	Rear axle data	8:
2.	Body Data:	•			a. One, driving	ng axle
	a. Open type b	ody w/fab:	ric top		(1) Conven	tional, single speed
3.	W/cab	-	-		b. Ordinance	design
	a. Conventiona	1		11.	Single rear w	heels
	b. Cab integra	1 w/body		12.	Hydraulic ser	vice brakes
	(1) Open			13.	24 volts star	ting, ignition &
	c. Front mount	ed			lighting syst	
	d. 4 person se			14.		em for underwater
	e. Single sitd	lown drive	controls		fording	
	f. Bucket seat	s in fron	t		W/towing pint	
	(1) Folding	seat in	rear	16.	Mfr. Data for	
4.	85" wheel base	!			a. Budd Mfr.	
5.	Tread width da	ta:			b. Ord. #8754	
	a. 53" front			17.	Mfr. for Chas	
	b. 53" rear				a. Ford Motor	· Co.
6.	Engine data:				b. Model M151	
	a. One gasolit	ne engine		18.	Govt. Spec. D	Pata:
	b. 4 cylinder				a. MIL	
	c. 71 HP @ 400	OO RPM			b. MIL-T-4533	318
	d. Front mtd.	w/forward	projection	ADD:	ITIONAL DATA	
	hood			Cap	scities: Cooli	
	e. Ordinance	design		Oil		5 qts
	(1) P/N 11	660425		Fue		17.7 gal
	(2) O.H.V.	liquid co	ooled			transfer trans 2.87 q
	(3) NSN 28	05-00-165	-4016		ferential (EA)	
7.	Transmission	data:			pare wheel & t	
	a. Manual, fo	ur speed			RALL DIMENSION	
	b. Ordinance			L.	•	32.7"
	(1) P/N 75			w.		64.3"
	(2) NSN 25			н.		71" reducible to 52.5
в.	Transfer Tran	smission	Data:	Wt.		2400 lbs.
	a. Manual, si	ngle spee	d	cu.		260 cu. ft. reduced
	<ul> <li>b. Ordinance</li> </ul>	design an	d is integral		MANUALS	_
	with trans	mission		TM9	-2320-218-20	-1 5
9.	Front Axle Dat	a:		TM9	-2320-218-34	1016
	a. Driving, π		agement	TM9	~2320-218-34P	AMI
	type, 2 dr			TM9	-2320-218-10C1	CHIV.
	b. Ordinance					SAMPLE
NO	MENCLATURE	MFR CODE	P/N	U/CODE	P/N (ORD)	NSN
St	arter	19728	MCZ4005UT			2920-00-678-1850
	nerator	19728		19207	10929868	2920-00-909-2483
	ark Plug	19728	AR5S			2920-00-955-9784
	in & Gen Blt-2ea	11288	11040	19207	11599019	
	stributor	19728	IDA4401UT			2920-00-065-7536
	el Pump	14892	480526			2910-00-678-1856
	rburetor	79960	13841	19207	11641105	
	il Filter Ele	70040	PF2			3930-00-906-3974
				45 amp		6140-00-057-2553

Figure 9-4.-DoD Property Record Card, DD Form 1342 (Block 26).

For guidance in completing the DD Form 1342, Property Record Card, use the NAVFAC P-300, Management of Transportation Equipment Manual; NAVFAC P-404, Naval Construction Force Equipment Management Manual; or the COMCBPAC/COMCBLANTINST 11200.1 (series).

# THE BATTALION MAINTENANCE SHOP INSPECTOR

The battalion maintenance shop inspector works directly for and is responsible to the maintenance supervisor. The inspector in a battalion or a special

operating unit will use the COMCBPAC/COMCBLANTINST 11200.1 (series) or the NAVFAC P-404, *Naval Construction Force Equipment Management Manual*, as guides. The inspector requirements are similar if not identical to those of the public works shop inspector.

### **BEEP INSPECTIONS**

As discussed in chapter 2, a Battalion Equipment Evaluation Program, or "BEEP," inspection is conducted under COMCBPAC/COMCBLANTINST 11200.1 (series) each time a battalion is relieved on site.

		E STORAGE ('CLE LOG	Weekly Start-Up and Inspection Procedures (COMCBLANTINST 11200.9E enclosure (3))	20-, 40- & 60-Day Dry Operational Test Procedures (COMCRI ANTINST	11200.9E enclosure (4))		80-Day Fully Operational Test Procedures (COMCBLANTINST 11200.9E enclosure (5))		DATE:
ECC	USN	DESCRIPTION	WEEKLY	20-	40-	60-	80-DAY	REMARKS	INSP SIGNATURE
									-
-									4
<b>M</b> -:									w.v
Mainte	enance Sup	Signature							

Figure 9-5.-Example of live storage cycle log.

This inspection evaluates the condition of the equipment to establish replacement priorities. If conducted properly, it also provides the maintenance supervisor of the relieving battalion with a means of establishing a shop workload plan for the deployment.

At the time the "BEEP" inspection is conducted, all discrepancies, including rust, body damage, and paint requirements, are written on the Equipment Repair Order. The repairs needed during the "BEEP" vary with each situation. As a rule, all needed safety repairs will be corrected and repairs of less than 4 hours time

completed if parts are available. Major repairs, component overhaul, and body work are generally deferred until after the completion of the "BEEP" and the scheduled maintenance cycle has begun. Examples of equipment evaluation inspection and attachment evaluation inspection guides are in chapter 2, figures 2-17, 2-18, and 2-19.

#### **EMBARKATION INSPECTIONS**

Clean vehicles, a critical part of embarkation inspections, allow for closer inspections and speed up

clearance of customs where vehicles must be certified free of dirt and bugs. Vehicles leaving foreign countries normally will be inspected leaving that area and again upon arrival at their destination.

In addition to safety and operational checks, vehicles inspected for embarkation require an emphasis on oil, fuel, and water seepage. An occasional drip may not adversely affect the normal operation of the vehicle, but it could become hazardous while being transported. You should make sure the spare tire and all collateral equipage are loaded with the vehicle, especially under tactical conditions.

In the shop area, it is easy to accomplish the configuration of the vehicle for loading, to put down the roll over protective structure (ROPS), and to remove the counterweights, and so forth. Itemizing these and related tasks on the Equipment Repair Order will ensure that the work will be completed, and in addition, provide a record of work required at the destination.

#### PRESERVATION INSPECTIONS

Different units you may be attached to, usually NMCBs, will have a certain amount of their equipment in a storage program. This program is used to reduce maintenance hours by removing selected CESE from service for extended periods of time. The criteria for storage programs is listed in the COMCBLANTINST 11200.9 (series) for live storage and COMCBPACINST 11200.22 (series) for inactive storage. The maintenance supervisor should be certain that equipment shop inspectors are thoroughly familiar with these instructions. Samples of live storage cycle logs and live storage service sheets are shown in figures 9-5 and 9-6.

In the NCF (battalion), according to both instructions listed in the preceding paragraph, cranes will not be placed in active or inactive storage. Cranes will be under the control of the crane crew and will be cycled at a minimum of once every 5 days to make sure that all moving parts are mechanically sound and fully operational.

	LIVE STORAGE SERVICE SHEET												
PRIMARY PM GRO	DUP	<b>-</b> -					SECONDARY PM GROUP						
ECC	<b>-</b> -		U	SN		<b>_</b>	DESC						
JULIAN		ΤY	PE S	ERVI	CE		INSPECTOR/OPERATOR NAME						
DATE	09	20	40	60	PM	04	INST ECTOROL ELATION NAME						
		-				- 1							
			-										
	_		-	-									
		-	<del>                                     </del>										
	+												

Figure 9-6.-Example of live storage service sheet.

Public works stations have equipment utilized on a seasonal basis (snow removal equipment, grounds maintenance equipment, etc.) and is unused, in some cases, most of the year. Since specific equipment preservation and storage instructions are not available to public works commands, the transportation supervisor and the equipment inspector should develop a system to preserve, store, and monitor CESE in its preserved condition.

Appendix E of the NAVFAC P-434, *Construction Equipment Department Management and Operations Manual*, provides operational testing instructions for CESE. It is also a good source of information on preservatives and their specific uses.

#### **DEADLINE INSPECTIONS**

Deadlined equipment is inspected on its scheduled PM due date, or sooner if the maintenance supervisor determines it is needed. When a unit is placed on deadline, an 01 level PM will be performed. The equipment inspector ensures the following:

- 1. All openings are covered and weathertight
- 2. All machine surfaces are preserved.
- 3. All disassembled components are tagged, covered, and stored.
- 4. No cannibalization has taken place since the last inspection. Controlled parts interchange is not approved as a normal procedure, although the maintenance supervisor may authorize it to meet operational commitment.
- 5. Any parts removed from the deadlined equipment we replaced with the nonserviceable item, and the maintenance supervisor makes sure that the replacement parts are ordered NORS (not operational ready supply).
- 6. All replacement parts, cost, and labor hours related to the interchange are charged against the piece of equipment on which the part failed. When the replacement parts are received and installed, only the labor involved is to be charged to the piece of equipment from which the interchange part was taken. As a part of the 01 type PM, the equipment will be cycled to prevent further deterioration.

# VEHICLE INSPECTIONS INVOLVING ACCIDENTS

For Naval Construction Force (NCF) units, when a vehicle that has been involved in an accident is inspected, a type 12 Equipment Repair Order will be initiated regardless of the damage.

# EXHAUST EMISSION CONTROL INSPECTIONS

Under the clean air act, DoD is required to comply with all state and local programs to improve air quality. With this in mind, check the following emissions control components on all vehicles you are inspecting for damage and tampering:

- 1. Catalytic converter.
- 2. Fuel tiller inlet restrictor.
- 3. Exhaust gas recirculation valve.
- 4. Air pump and air pump drive belt.
- 5. Verify the proper hookup of all vacuum lines and be sure no vacuum lines are plugged.
- 6. Check all other pollution control devices attached to the vehicle.

As you already know, emission control design varies between different manufacturers. Go to the proper repair and maintenance publications for correct information on these devices.

State and federal law forbid your removing or tampering with emission control devices. If the unit or station that you are assigned to does not have the equipment needed to analyze and adjust CESE equipped with these devices, the vehicle should be sent to a local dealer for repairs and proper adjustment.

#### CRANE INSPECTIONS

The crane inspector should be the most knowledgeable and conscientious mechanic available. In addition to the regular CESE inspection, the weight-handling equipment inspection will place primary emphasis on safety of all load bearing, load controlling parts, and safety devices for safe and sound working conditions. Examination will be made by sight, sound, touch, and as necessary, by instrumentation, nondestructive testing, and disassembly. Figure 9-7 shows the type of format used in crane condition inspection. Disassembly should be limited to suspected or abnormal conditions.

It is strongly recommended that the person selected for the job of crane inspector attend special construction battalion training-540.1, Crane and Attachments I and 540.2, Cranes and Attachments II. Both courses are

		CRANE COM	NDITION INSPECT	TION RECORD			,	
Crane No.	Туре	Location		ense Nos.				
Purpose of i	nspection:	Date started		Da	ate com	pleted		
Item No.		Item o	description		В	D	Α	Insp/ Init.
1	Bent, cracked, o	r corroded struc	tural members					
2	Cracked or corre							
3			riorated rivets or bol	lts				
4	damaged strands sockets, and dea and evidence of	s, crushed or fland-end connection proper inspection D for detailed	troken wires, corrositened sections, conons. Check for proper on of idler sheaves at inspection requirer	dition of er lubrication and saddles. See				
, 5	Inspect hooks for disassembly, instapplicable. See requirements.							
6	Inspect all brake components for	es and clutches proper adjustm	s. Spot-check wear.					
7	Check all contro	ols for proper co	o <b>n</b>					
8	Check all contro	ol components f	or proper condition	and operation				
9	Inspect all limit	switches for co	ndition and proper o	operation				
10	Ensure each dru rope at lowest v		m of two complete w	vraps of wire				
11	Check load indi	icators for cond	tion and working ac	ccuracy				
12	Inspect all mechanisms for wear, cracks		ent which is reasona	bly accessible				
13	Inspect where p		aligned bearings,					
14	Check compone leaks	oise, and oil						
15		s for wear, rough groove where po	nness, free-turning, a	and alignment.				
16			vheels, tires, rollers	and roller paths				
17	Inspect for excessive wear of chains and sprockets. Measure chain stretch of load chains.							

Figure 9-7.-Crane condition inspection record.

Item No.	Item description		В	D	A	Insp/ Init.
18	Verify that correct certified capacity charts or hoc is in view of operator and/or rigging personnel	k load rating data	-			
19	Inspect operators cab for cleanliness and operation	n of all equipment				
20	Check machinery house for cleanliness, proper sa warning signs, and storage of tools and equipmen					
21	Check operation of all indicators, warning device	s, and lights				
22	Check for proper type and condition of all fire pro	otection equipment				
23	Verify that pressure vessel inspection certificates current (see NAVFAC M0-324 or appropriate doc procedures)					
24	Check condition and function of outriggers, pads, and cylinder mountings. Check level indicators	boxes, wedges,				
25	Check center pin nut and steadiment by observing behavior during load test (see paragraph 2.2.2, ap					
26	Check travel, steering, braking, and locking device and proper operation	es for condition				
27	Check radius indicator for accuracy by measuring at least two boom positions	actual radius in				
28	Check pawls, ratchets, and spuds for proper engagoperation of interlocks	gement and				
29	Inspect tanks, lines, valves, drains, filters, and oth air systems for leakage and proper operation	er components of				
30	Inspect reservoirs, pumps, motors, valves, lines cy other components of hydraulic systems for leakag operation					
31	Check engines and engine-generator sets for proposafety and system leakage	er performance,				
32	Inspeck for bent, cracked, corroded, or dented boo	om members				
33	Check condition of counterweights, ballast, and se	curing fasteners				
34	Check all compartments (voids) for water tightnes	s				
35	Check accuracy of list and trim indicators against previous test data	design data or				
Remarks: Legend: B-t	pefore; D-during; A-after				1	
Inspector Sig	nature/Date Tes	t Director Signature	/Date			

Figure 9-7.-Crane condition inspection record-Continued.

offered at NCTC, Port Hueneme, California, and NCTC, Gulfport, Mississippi.

The crane certifying officer is designated by the commanding officer in writing. The crane certifying officer, according to the COMCBPAC/COMCB-LANTINST 11200.1 (series), designates the crane inspector in writing.

The inspector should use the NAVFAC P-307, *Management of Weight-Handling Equipment Manual*, as a guide to perform inspections on cranes.

For the correct procedures and precautions for the towing of mobile cranes, see CESO maintenance bulletin No. 82.

#### FINAL INSPECTIONS

The shop inspector performs final inspections on all CESE leaving the maintenance shop. The inspector makes sure that all repairs have been satisfactorily completed, readying the unit for return to service. After operational testing, the unit is turned over to dispatch. The inspector then returns the ERO or SRO package to cost control for closing out.

Occasional y a piece of equipment is returned to the shop for re-work. Keep in mind the quality of work leaving the maintenance shop is a direct reflection of how well you, as the inspector, are doing your job. If you do not feel the quality of work coming out of individual shops (automotive, 5000, heavy, etc.) is satisfactory, return the ERO or SRO to the shop supervisor. Inform the maintenance supervisor of the problem. He will discuss the situation with the shop supervisors and correct the problem.

Re-work is double work!!! Get the job done right the first time and you will not have to do it the second time. Quality assurance through thorough final inspection is the only way to achieve the goal of ZERO re-work. Ask the following questions in looking for common problems:

- 1. Was the maintenance or repair completed in a realistic time frame? Is it noted on the ERO?
- 2. Was all of the work completed?
- 3. Were all of the DTO parts installed?
- 4. Are parts being left off the completed unit (nuts, bolts, covers, etc., missing)?
- 5. Was the vehicle cleaned after the work was performed (important if it was the COs sedan)?
- 6. Were any lubrication fittings missed? (Do your homework first; get the technical manual.)
- 7. WAS QUALITY PREVENTIVE MAINTE-NANCE AND REPAIRS PERFORMED? You are the inspector. Only you can answer this question.

One last item. As an inspector, your direct supervisor is the maintenance supervisor. <u>Do not</u> cut him short by not keeping him informed of what is happening in your world of vehicle inspection.

#### REFERENCES

Construction Equipment Department Management and Operations Department Manual, NAVFAC P-434, Naval Facilities Engineering Command, Washington, D.C., 1982.

Construction Mechanic 1, Naval Education and Training Program Management Support Activity, Pensacola, Fla., 1989.

Management of Transportation Equipment Manual, NAVFAC, P-300, Naval Facilities Engineering Command, Washington, D.C., 1989.

Naval Construction Force Equipment Management Manual, NAVFAC P-315, Naval Facilities Engineering Command, Washington, D.C., 1985.